
C2478 PWM Proportional Solenoid Driver Model Selection

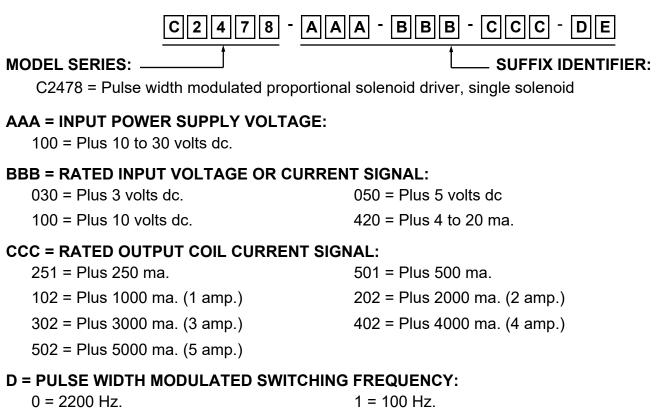

2 = 200 Hz.	3 = 400 Hz.
4 = 1000 Hz.	X = Special, factory assigned number.

E FACTORY INSTALLED OPTION:

0 = Standard, with internal command potentiometer, no additional options.

1 = Standard, without internal command potentiometer, no additional options.

X = Special features, factory assigned number.

NOTES:

- 1) The rated input signal (suffix BBB) defines the customer supplied voltage value to be applied to the "A" tab. All voltage input models will accept a plus 5 volt dc signal applied to the "W" tab.
- 2) Models with the plus 4 to 20 ma. (suffix BBB = 420) input signal are not available with the internal command potentiometer (suffix E = 0) In addition, the "W" tab is not supplied, therefore the plus 5 volt dc voltage command signal is not available.
- 3) The optimum pulse width modulated (PWM) switching frequency for a specific valve coil is generally specified by the valve manufacturer. In the event that this frequency value is not available, you can select the 2200 Hz. value (suffix D = 0). This frequency will drive all proportional solenoids, however the valve response may be less than the best available when operated at the manufacturers recommended value.

Datatran

C2478 PWM Proportional Solenoid Driver Model Selection



TEL: (845)-856-4313 FAX (845) 858-2824

Datatran